

User Manual

EDX-403TL

4 Channel Trailing Edge Dimmer Pack



INDEX

1. INTRODUCTION	3
1-1 FEATURE.....	3
1-2 SPECIFICATION	3
1-3 DIMENSION.....	3
1-4 PANEL INTRODUCTION.....	4
1-5 WIRING DIAGRAM.....	4
2. OPERATION	5
2-1 INITIALIZATION.....	5
2-2 DMX-512 ADDRESS SETTING	5
2-3 BYPASS DMX-512 SIGNAL	5
2-4 DIMMING CURVE SETTING	6
2-5 DISPLAY TEMPERATURE	6
2-6 CURRENT DETECTION FUNCTION	7
2-7 VERSION NO. CHECK.....	7
3 EDX SYSTEMS.....	8
3-0 EDX MODE	8
3-1 ID NO. SETTING.....	10
3-2 ZONE SETTING	10
3-3 SCENE FADE TIME SETTING	11
3-4 EDITING LEVEL OF EACH CHANNEL.....	11
3-5 SCENE SAVE	12
3-6 PARTITION (MULTI-ZONE) FUNCTION	13
3-6-1 <i>Enable/Disable Partition</i>	14
3-6-2 <i>Partition Setting of Each Output</i>	14
APPENDIX: FADE TIME TABLE	15
LIMITED WARRANTY	16

1. Introduction


1-1 Feature

- Trailing edge dimming outputs.
- 4 channel output, 3A/CH (Max.), 8A in total
- Temperature measurement
- Current detection
- 6 scenes, independent fade time for each scene
- Dimming curve(C1-C4)


1-2 Specification

- Power supply: AC 100-240V 50Hz-60Hz
- Protocol: DMX-512/EDX
- Signal connector: 6P6C PHONE JACK *2, 4-Pin terminal * 1
- Installation: track-mounted
- Dimension: 234 (W) x 90 (H) x 62 (D) mm
- Weight: 670g

1-3 Dimension

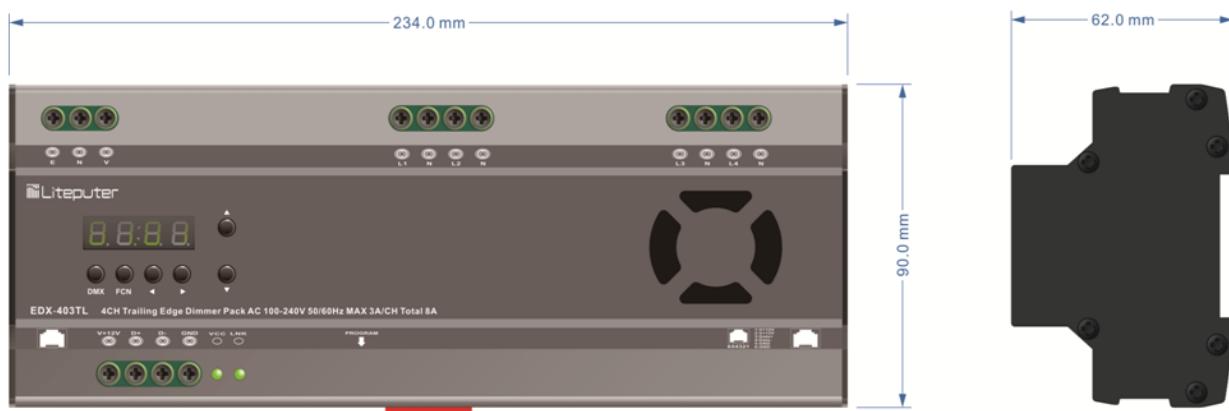


1-4 Panel Introduction

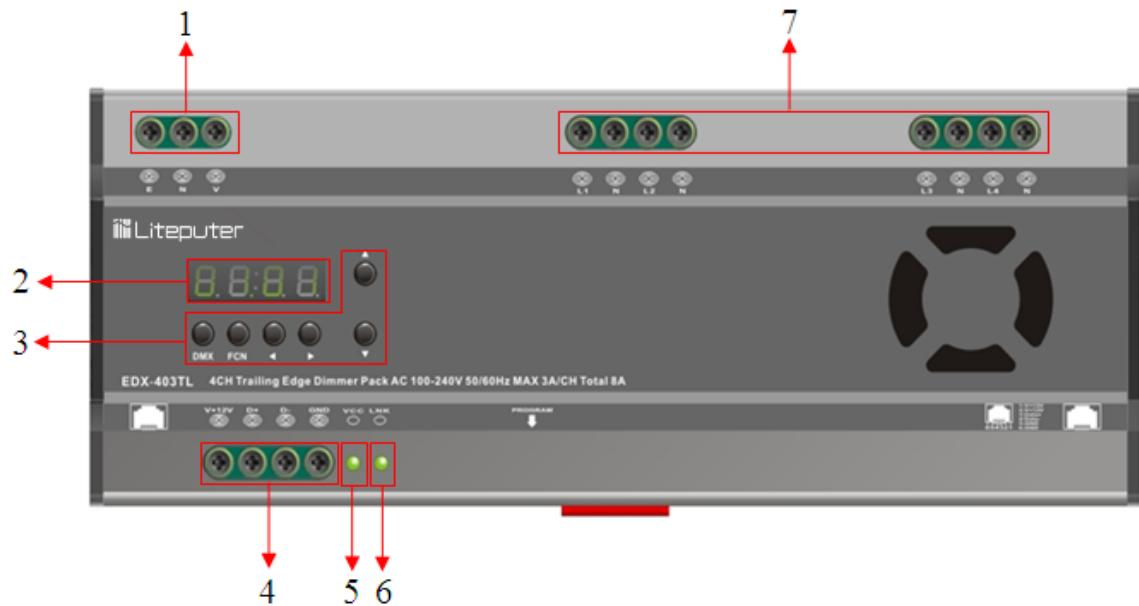

1	AC 100 – 240V Input	5	Power Indicator (VCC)
2	LED Display	6	LINK Indicator
3	Function button 【▲】【▼】【▶】【◀】【FCN】【DMX】	7	AC Output x 4
4	DMX/EDX connector		

1-5 Wiring Diagram

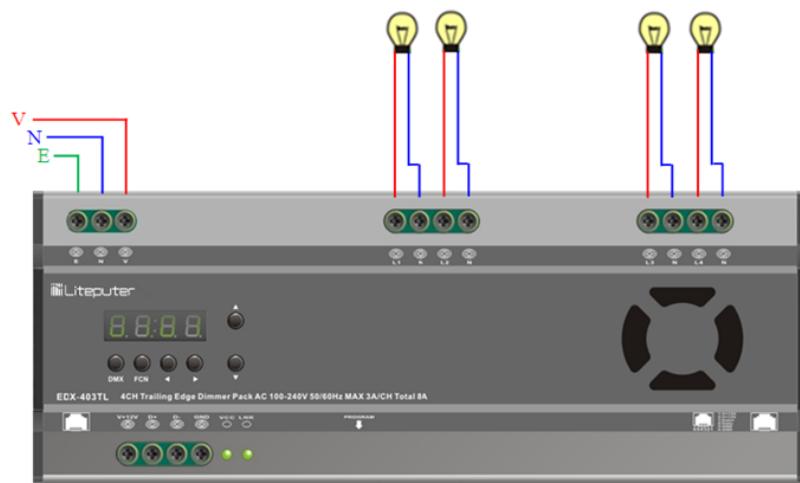

2. Operation

2-1 Initialization

STEP-1: Hold **【DMX】** and **【FCN】** until LED displays,



STEP-2: Release both buttons, initialization completed, press **【FCN】** back to main screen.

2-2 DMX-512 Address Setting

STEP-1: Hold **【DMX】** and then press **【▲】** or **【▼】** to set the DMX-512 start channel address.



STEP-2: For example, press **【DMX】 + 【▲】**, LED displays,



DMX-512 start channel address is 3.

In DMX mode, the first dot is blinking means that DMX-512 signal presents.



2-3 Bypass DMX-512 Signal

STEP-1: Press **【FCN】** until LED displays,



STEP-2: Press **【▲】** or **【▼】** to select ON/OFF:



In which:

ON—— Bypass external DMX signal

OFF—— Accept external DMX signal

STEP-3: Press **【DMX】** to save the setting and exit.

2-4 Dimming Curve Setting

STEP-1:Press **【FCN】** until LED displays,



The first digit is selected channel. The last two digits mean current dimming curve mode.

There are four modes of dimming curve:

C1, C2, C3: for general lamps

F: for fluorescent lamps

STEP-2: Press **【▶】** or **【◀】** shift to choose channel. For example , press **【▶】** , LED displays,



Now channel 2 is in C2 Dimming curve mode.

STEP-3: Press **【▲】** or **【▼】** to choose dimming curve mode. For example ,press **【▲】** ,LED displays,



Now, channel 2 is in C3 Dimming curve mode.

STEP-4: Press **【DMX】** to save the setting and exit.

2-5 Display Temperature

STEP-1:Press **【FCN】** until LED displays,



“20” mean temperature is 20°C .

Fan will be working automatically when the temperature is above 45°C. Once the fan is working, it will not be shut down until the temperature is below 20°C.

2-6 Current Detection Function

STEP-1:Press **【FCN】** until LED displays,



"00" means current is 0 A.

2-7 Version No. Check

STEP-1:Press **【FCN】** until LED displays,



V1.0 is software version No..

STEP-2: Press **【DMX】** to exit.

3 EDX Systems

EDX-403TL can work either in DMX-512 mode or EDX mode.

DMX-512 Mode: EDX-403TL can be controlled by DMX-512 controllers.

EDX Mode: EDX-403TL can be recalled its stored lighting scenes by connecting to ECP scene control panels.

Please refer DMX-512/EDX wiring guide on Lite-Puter's website: http://www.liteputer.com.tw/tech_guide.asp

3-0 EDX Mode

EDX is a protocol specifically designed for architectural and environmental lighting applications. EDX dimmers or devices are able to store scenes in themselves.

Each EDX device or ECP panel can be specified by a zone number. The scenes stored in EDX devices can be recalled by ECP panels with the same zone number.

For example, EDX devices configured as zone 1 can be controlled (recall scenes) by ECP panel configure as zone 1.

EDX devices configured as zone 5 can be controlled (recall scenes) by ECP panel configure as zone 5.

Figure 1: One EDX device with one ECP scene panel


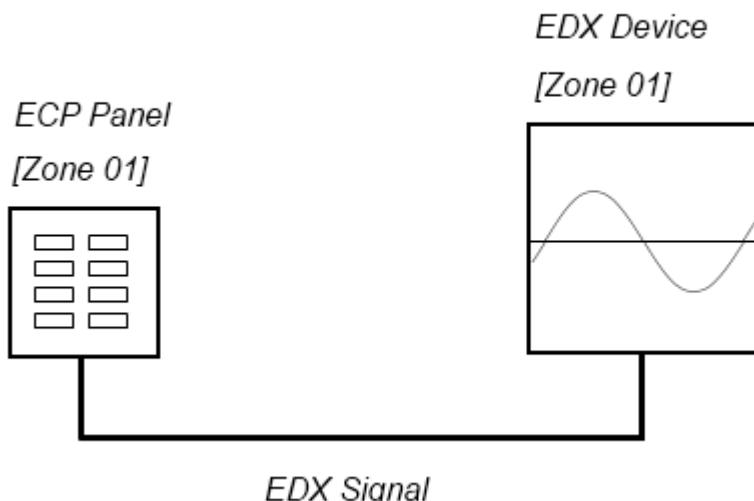


Figure 2: Multiple EDX devices with ECP scene panels

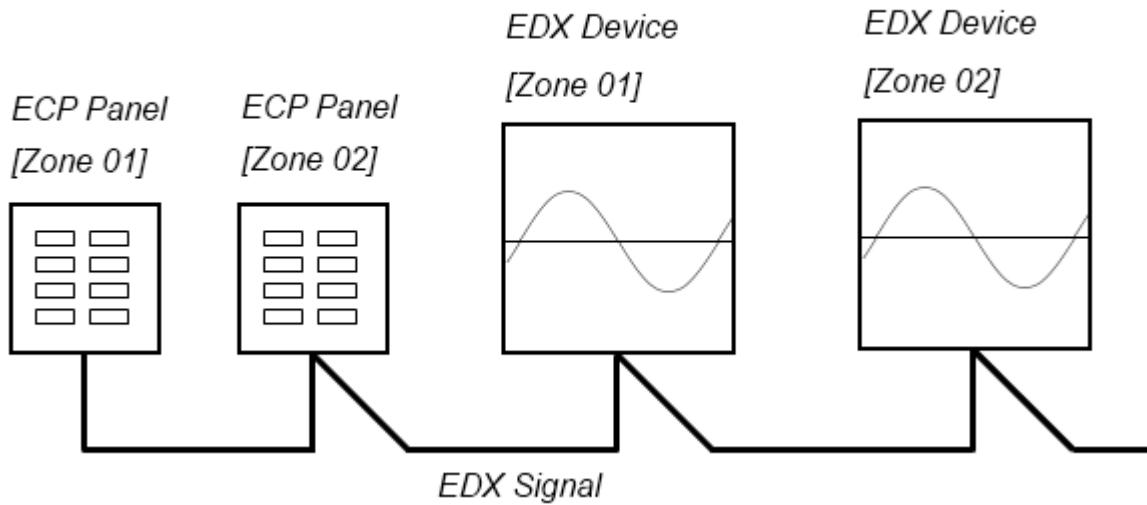

ECP scene panel 1 controls EDX device 1.

ECP scene panel 2 controls EDX device 2.

* If there are both DMX-512 and EDX signal present, DMX-512 signal has the highest priority.

3-1 ID No. Setting

Each EDX series device must have a ID No.. When one device is working alone, there is no need to adjust the ID No., but when several devices are working together, each device must have a different ID

STEP-1: On the main page, press **【FCN】** twice to enter ID NO. setting.



STEP-2: Press **【▲】** or **【▼】** to change ID NO.. (Up to 999)

STEP-3: After setting, press **【DMX】** to save, press **【FCN】** to exit.

3-2 Zone Setting

Definition of zone: The device must set the Zone No. before using, which consists of two parts, one is the zone no. and the other is the start channel address. For example, if there are 4 EDX-403TL in zone 1 with total 16 channels, the zone code should be set as 01-01, 01-05, 01-09, and 01-13

STEP-1: Press **【FCN】** to adjust to ZONE setting function, LED displays,



The former “01”is current zone number; the latter “01” is start channel address.

STEP-2: The first 2 digits 01 are blinking. Press **【▲】** or **【▼】** to modify the current zone number. For example , press **【▲】** , LED displays,



STEP-3: Press **【▶】** or **【◀】** shift to adjust start channel, and the last 2 digits are blinking,

LED displays,



STEP-4: Press **【▲】** or **【▼】** to modify start channel. For example, press **【▲】** , LED displays:



STEP-5: Press **【DMX】** to save the setting and exit.

3-3 Scene Fade Time Setting

STEP-1: Press **【FCN】** until LED displays,



The first digit means scene name: "0" means OFF scene, "1" means Scene 1 , "2" means Scene 2 and so on.

0.1 means fade time is 0.1s.

STEP-2: The first digit '0' is blinking. Press **【▲】** or **【▼】** to choose scene. For example, when LED displays 0 F 1. 0, press **【▲】** to choose scene 1.



STEP-3: Press **【▶】** or **【◀】** shift to adjust the value, and the last 2 digits are blinking.

Now the fade time of scene 1 is 1second.



STEP-4:Press **【▲】** or **【▼】** to modify the current fade time.

STEP-5: Press **【DMX】** to save the setting and exit.

Please refer appendix for fader time table.

3-4 Editing Level of Each Channel

STEP-1:In the main screen, Press **【▲】** or **【▼】** to adjust dimming lever. LED displays,



The first digit is selected output channel, the last two digits are dimming lever for this channel.

Press **【▶】** or **【◀】** shift to choose channel. Press **【▲】** or **【▼】** to adjust dimming lever. LED displays,



STEP-2: Press **【DMX】** to save the setting and exit.

3-5 Scene Save

STEP-1: After editing channel dimming lever, press **【DMX】**, LED displays,



"01" means scene 1.

STEP-2: Press **【▲】** or **【▼】** to adjust scene number(0 ~ 6).

STEP-3: Press **【DMX】** to save the setting and exit.


3-6 Partition (Multi-Zone) Function

Generally, all channels on EDX-403TL can be only set to only 1 zone.

To make EDX-403TL more flexible, you can assign each channel on EDX-403TL to different zones by using partition function. For example, you assign channel 1 – 2 on EDX-403TL to partition 1 and channel 3 – 4 on EDX-403TL to partition 2. There are 2 control panels (ECP-106) connected to EDX-403TL, one is set to zone 1; the other is set to zone 2. If scenes are recalled by ECP-106 of zone 1, only channel 1 – 2 on EDX-403TL will change their dimming levels. If scenes are recalled by ECP-106 of zone 2, only channel 3 – 4 on EDX-403TL will change their dimming levels.

Figure: Channel 1 and 2 on EDX/EPX device in zone 1 (channel 1,2 are controlled by ECP panel in zone 1)

Channel 3 and 4 on EDX/EPX devices in zone 2 (channel 3,4 are controlled by ECP panel in zone 2)

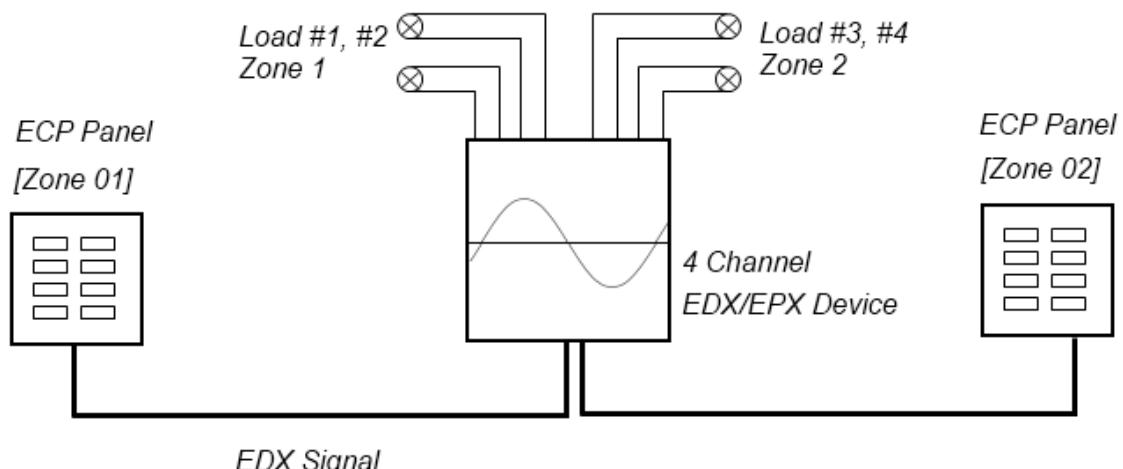

3-6-1 Enable/Disable Partition

STEP-1: Press **【FCN】** until LED displays,



Now partition (Multi-Zone) function is disabled.

STEP-2: press **【▲】** or **【▼】** to enable/disable partition (Multi-Zone) function.

For example press **【▲】**, LED displays,



Now partition function is enabled.

STEP-3: Press **【DMX】** to save the setting and exit.

3-6-2 Partition Setting of Each Output

STEP-1: Press **【FCN】** until LED displays,



The former “1-”is 1st output on EDX-403TL; the latter “01”is zone number. Now, it means output 1 is in zone 1.

STEP-2: The former “1-”are blinking, and press **【▲】** or **【▼】** to adjust output number. For example, press **【▲】**, LED displays,




STEP-3: Press **【▶】** to shift to adjust zone, and the last two digits “01”are blinking:



STEP-4: Press **【▲】** or **【▼】** to adjust the zone. For example, Press **【▲】**, LED displays,



STEP-5: Now, Press **【▶】** shift to channel address in selected zone. LED displays,

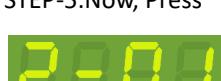

STEP-6: Press **【▲】** or **【▼】** to adjust channel starting address in selected zone. Press **【▲】**, LED displays,



STEP-7: Press **【DMX】** to save the setting and exit.

Appendix: Fade Time Table

0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1
0.1s	0.2s	0.3s	0.4s	0.5s	0.6s	0.7s	0.8s	0.9s	1s
2	3	4	5	6	7	8	9	10	12
2s	3s	4s	5s	6s	7s	8s	9s	10s	12s
14	16	18	20	25	30	35	40	45	50
14s	16s	18s	20s	25s	30s	35s	40s	45s	50s
55	1 .	2 .	3 .	4 .	5 .	6 .	7 .	8 .	9 .
55s	1m	2m	3m	4m	5m	6m	7m	8m	9m
10 .	11 .	12 .	13 .	14 .	15 .	16 .	17 .	18 .	19 .
10m	11m	12m	13m	14m	15m	16m	17m	18m	19m
20 .	21 .	22 .	23 .	24 .	25 .	26 .	27 .	28 .	29 .
20m	21m	22m	23m	24m	25m	26m	27m	28m	29m
30 .	31 .	32 .	33 .	34 .	35 .	36 .	37 .	38 .	39 .
30m	31m	32m	33m	34m	35m	36m	37m	38m	39m
40 .	41 .	42 .	43 .	44 .	45 .	46 .	47 .	48 .	49 .
40m	41m	42m	43m	44m	45m	46m	47m	48m	49m
50 .	51 .	52 .	53 .	54 .	55 .	56 .	57 .	58 .	59 .
50m	51m	52m	53m	54m	55m	56m	57m	58m	59m
60 .	61 .	62 .	63 .	64 .	65 .	66 .	67 .	68 .	69 .
60m	61m	62m	63m	64m	65m	66m	67m	68m	69m
70 .	71 .	72 .	73 .	74 .	75 .	76 .	77 .	78 .	79 .
70m	71m	72m	73m	74m	75m	76m	77m	78m	79m
80 .	81 .	82 .	83 .	84 .	85 .	86 .	87 .	88 .	89 .
80m	81m	82m	83m	84m	85m	86m	87m	88m	89m
90 .	91 .	92 .	93 .	94 .	95 .	96 .	97 .	98 .	99 .
90m	91m	92m	93m	94m	95m	96m	97m	98m	99m

Limited Warranty

1. Lite-Puter is only responsible for the product itself.
2. Lite-Puter warrants to repair any manufacturing defects within one year of distribution date.
3. Lite-Puter does not offer on-site service. Should a defect appear in Lite-Puter's product, please deliver the product to local distributors or Taiwan Headquarters.
4. This Limited Warranty does not cover:
 - a. Any fault caused by false usage or imprudence (collision, inadequate installation or adjustment, insufficient ventilation, or improper repairs).
 - b. Force majeure factors (flooding, earthquake, volcanic eruption, or other factors beyond Lite-Puter's control).
 - c. Labor costs incurred in diagnosis of defects; installation, reinstallation, wiring, rewiring, repairing, adjustment, or reprogramming of a product; or any other consequential expenses.
 - d. Other Lite-Puter or non-Lite-Puter products or devices offered, packaged, or sold with the product.
5. Lite-Puter does not warrant that the product will operate without interruption or free of error.

World Headquarters :

Lite-Puter Enterprise Co., Ltd.

Address: 9F, No. 196, Sec. 3, Datong Rd., Xizhi Dist., New Taipei City 221, Taiwan

Tel: +886-2-86472828

Fax: +886-2-86472626

Website: www.liteputer.com.tw

E-mail: sales@liteputer.com.tw

Shanghai Factory :

Lite-Puter Technology (Shanghai) Co.,Ltd.

Address: No. 375, Xingmei Rd., Minhang Dist., Shanghai 200237, China

Tel: +86-21-54408210

Fax: +86-21-54403376

Website: www.liteputer.com.tw

E-mail: sales_china@liteputer.com.tw